



H.D SERVICE CO., LTD.

601-010, 1212-11, Haeduk Bldg' RM No.403, Choryang-Dong, Dong-Gu, Busan, Korea

HOW TO APPLY NF TAPE

APPLICATION SCOPE

NF TAPE is applied to around flanged joints, bonnets of valve and any other threaded connections on liquid pipe system(fuel oil, lubricating oil) under pressure which are located in ship's engine room and others.



HOW TO APPLY NF TAPE

- Before taping, must be removed moisture, oil, dirt, etc, on applying surface.
- Peel off the backing film before taping.
- Wrap NF TAPE with enough tension to assure conformability to the surface.
- Recommend to apply the tape with at least 1/3 overlap for better performance.

HOW TO STOCK NF TAPE

Stock the tape in the sunlight-avoided and well ventilated place.

WORK STANDARD

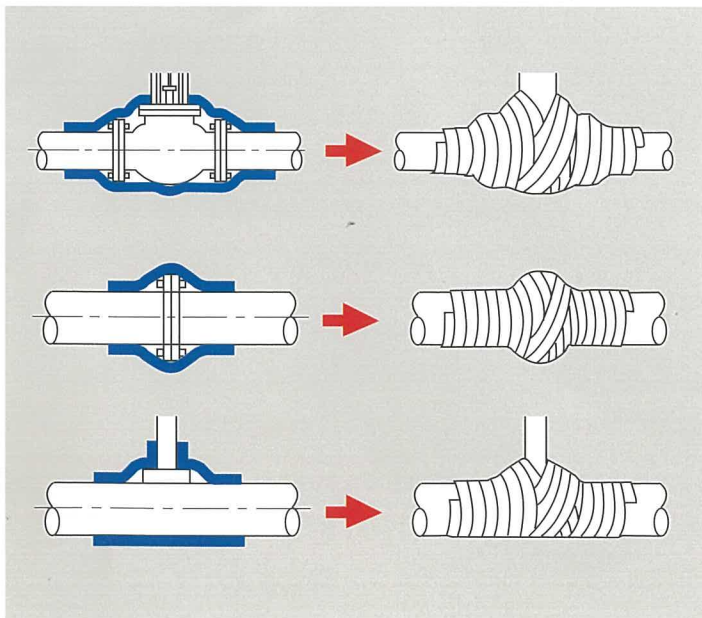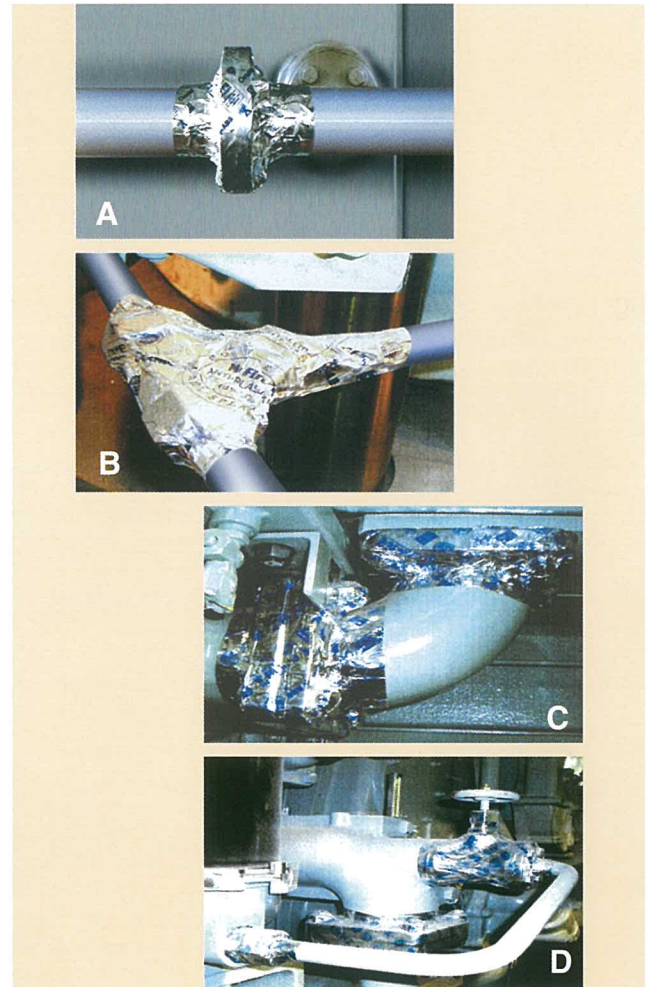

SIZES/PACKING

Dimension(WXL)	Quantity(Box)	Weight
35mm(W) x 10mtr	1Box 28 rolls	8.2 kg
50mm(W) x 10mtr	1Box 20 rolls	7.9 kg
100mm(W) x 10mtr	1Box 10 rolls	7.3 kg
140mm(W) x 10mtr	1Box 7 rolls	7.2 kg
250mm(W) x 10mtr	1Box 4 rolls	7.0 kg
500mm(W) x 10mtr	1Box 2rolls	7.4 kg

TYPE APPROVAL



ABS



ClassNK



CCS